



GrilleGuy.com, LLC

00 - 01 Nissan Maxima Install Instructions



Step 1: Note these instructions are for both the upper and the lower, so not all steps are applicable if you bought only an upper or a lower grille. The lower will be covered first.



Step 2: Get your tools out, a flat head screwdriver (small), wire cutters, and possibly some pliers or channel locks. Then crawl under the car.



Step 3: You want to remove the 6 quick lock fasteners that are on the bottom of the car. They hold the flap up (see next picture)



GrilleGuy.com, LLC



Step 4: The lower grille will go in from the bottom and gets placed behind the vertical bars. Using the supplied tie wraps, attach the grille to the bars. We recommend two on the bottom and 2 on the top (see photo). Reinstall lower flap fasteners.



Now we will begin the upper grille installation.



GrilleGuy.com, LLC




Step 5. Remove the shroud that covers from the bumper to the radiator. It is held in with same quik-lok fasteners as the lower flap. Determine left and right hand grilles. The right (drivers side) grille has a notch for the hood release mechanism and that goes toward the center of the car. These inserts are a little tricky to seat as there are some

obstacles to avoid. Just take your time and seat them as flush as possible to the back of the OEM grille.



Step 7. The tie wraps go through the hole in the frame and a hole in the material. Pulling the grille forward.

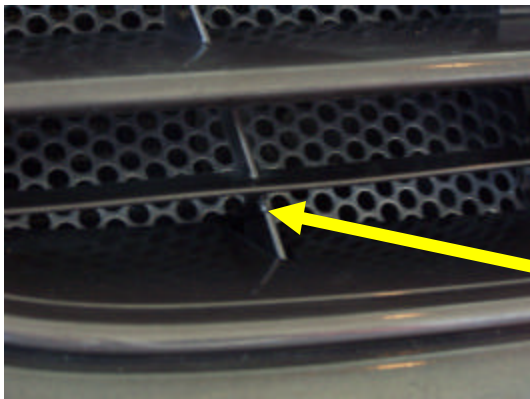

Step 8. It should look like the picture shown here. Note there is a tie wrap holding the bottom section up to the OEM grille.

That's it your finished.

