


Screw locations - 3
Remove these as the first step

Figure 1 - Screw locations

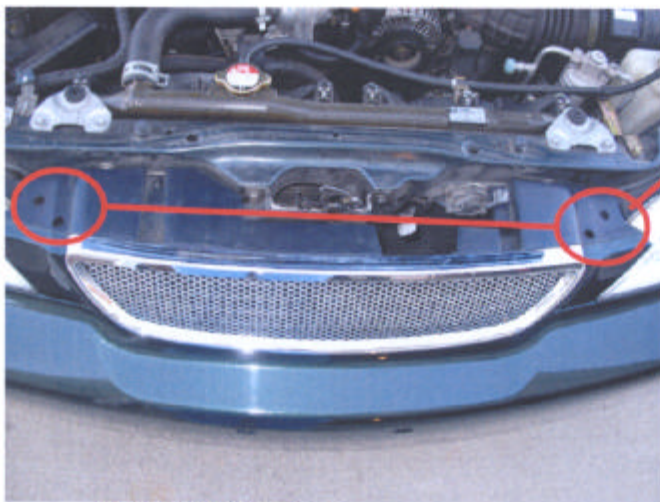

Gib locations - 2 each side of grill
Using a flat blade screwdriver release the tabs the outside 2 are released by prying sideways to release the gibs. The inside 2 are released by pushing down to release the gibs. BE CAREFUL you are pressing and prying on plastic components! Use a flashlight to see what you are doing. Also see details below to figure out what you are trying to accomplish.

Figure 2 - Gib Locations



Figure 3 - Gib Detail

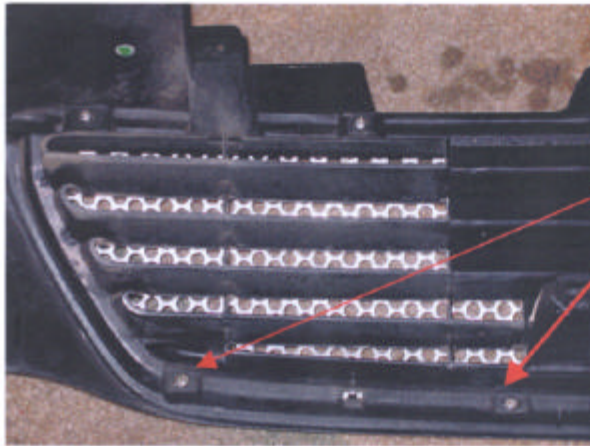


Figure 4 - Screws to remove chrome trim

Remove the screws that line the outer rim of the grill once removed from the car. Keep the screws as you will need them to put the chrome trim back on the car.

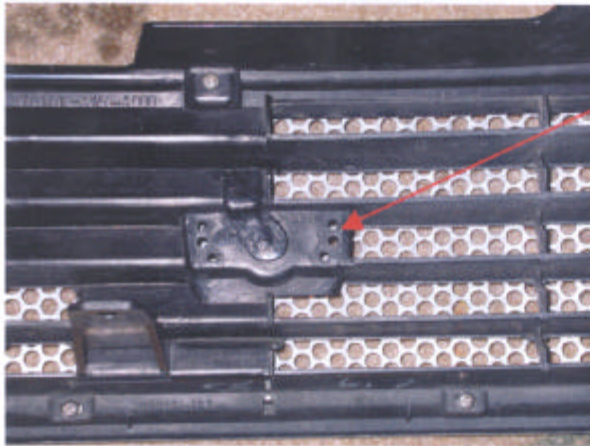


Figure 5 - Screw to remove A emblem

Remove the screw that hold on the Acura emblem. These will not be used.

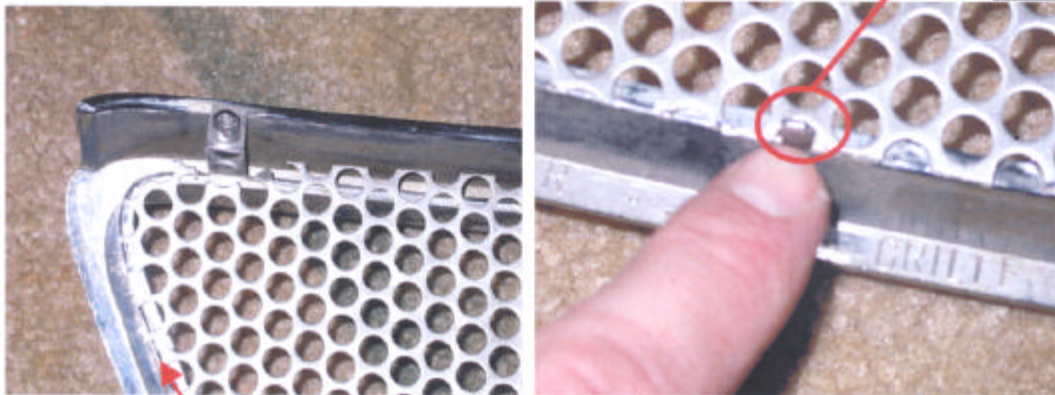


Figure 6 - Grill mounted to chrome trim

You may or may not get this lucky, the locator fell right into one of the holes

The edge must not pass the lip on the sides or the bottom. The top can have overlap.



Figure 7 Finished product

To install place aluminum between chrome trim and old grill and put in the screws. Then snap nose part onto gibs and put in 3 screws. If you broke your gibs, just glue them in place with something like super glue or an epoxy. I broke mine the first time I removed it and have JB Weld on the top 2 now. Now that I know how they work its no problem to take it off and put in back on. Total time 20 minutes.



Figure 8 - Tools required

You will need a phillips and a flat blade screw driver of the length shown (or longer). You might need a tin cutter or some diagonal cutters to clean up the aluminum to make it clear the tabs on the chrome trim.